

User Manual

Revision 1.000

English

EtherCAT / EtherNet/IP Slave - Converter

(Order Code: HD67E27-A1)

For Website information:

<https://www.wachendorff-prozesstechnik.de/HD67E27-A1>

Benefits and Main Features:

- ⊕ Very easy to configure
- ⊕ Triple Electrical isolation
- ⊕ Temperature range: -40°C/+85°C (-40°F/+185°F)



Abbildung ähnlich

For other EtherCAT Slave products see also the following link:

Converter EtherCAT Slave to

<https://www.wachendorff-prozesstechnik.de/produktgruppen/gateways-und-protokollwandler/produkte/ethernet/>

(Serial)
 (Modbus Master)
 (Modbus Slave)
 (Modbus TCP Master)
 (Modbus TCP Slave)
 (BACnet Master)
 (BACnet Slave)
 (CAN)
 (CANopen)
 (DeviceNet Master)
 (DeviceNet Slave)
 (DMX)
 (Ethernet)
 (IEC61850 Client)
 (IEC61850 Server)
 (J1939)
 (MQTT)
 (NMEA0183)
 (NMEA2000)
 (OPC UA Client)
 (OPC UA Server)
 (PROFINET Master)
 (PROFINET Slave)
 (SNMP Manager)
 (SNMP Agent)
 (EtherNet/IP Master)
 (S7comm Client)
 (IO-Link Master)

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	6
CONFIGURATION	6
POWER SUPPLY	7
FUNCTION MODES	8
LEDS	9
ETHERCAT	10
ETHERNET	11
USE OF COMPOSITOR SW67E27	12
NEW CONFIGURATION / OPEN CONFIGURATION	13
SOFTWARE OPTIONS	14
SET COMMUNICATION	16
ETHERCAT SET ACCESS	17
ETHERCAT ESI FILE	18
UPDATE DEVICE	19
PLC CONFIGURATION	21
MECHANICAL DIMENSIONS	25
ORDERING INFORMATIONS	26
ACCESSORIES	26
DISCLAIMER	27
OTHER REGULATIONS AND STANDARDS	27
WARRANTIES AND TECHNICAL SUPPORT	28
RETURN POLICY	28

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ✦ Updated
- ✦ Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	18/09/2020	Ff	All	First Release

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning.

ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

SECURITY ALERT:**GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

INTENDED USE

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

QUALIFIED PERSONNEL

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

RESIDUAL RISKS

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

CE CONFORMITY

The declaration is made by our company. You can send an email to support@adfweb.com or give us a call if you need it.

EXAMPLE OF CONNECTION:

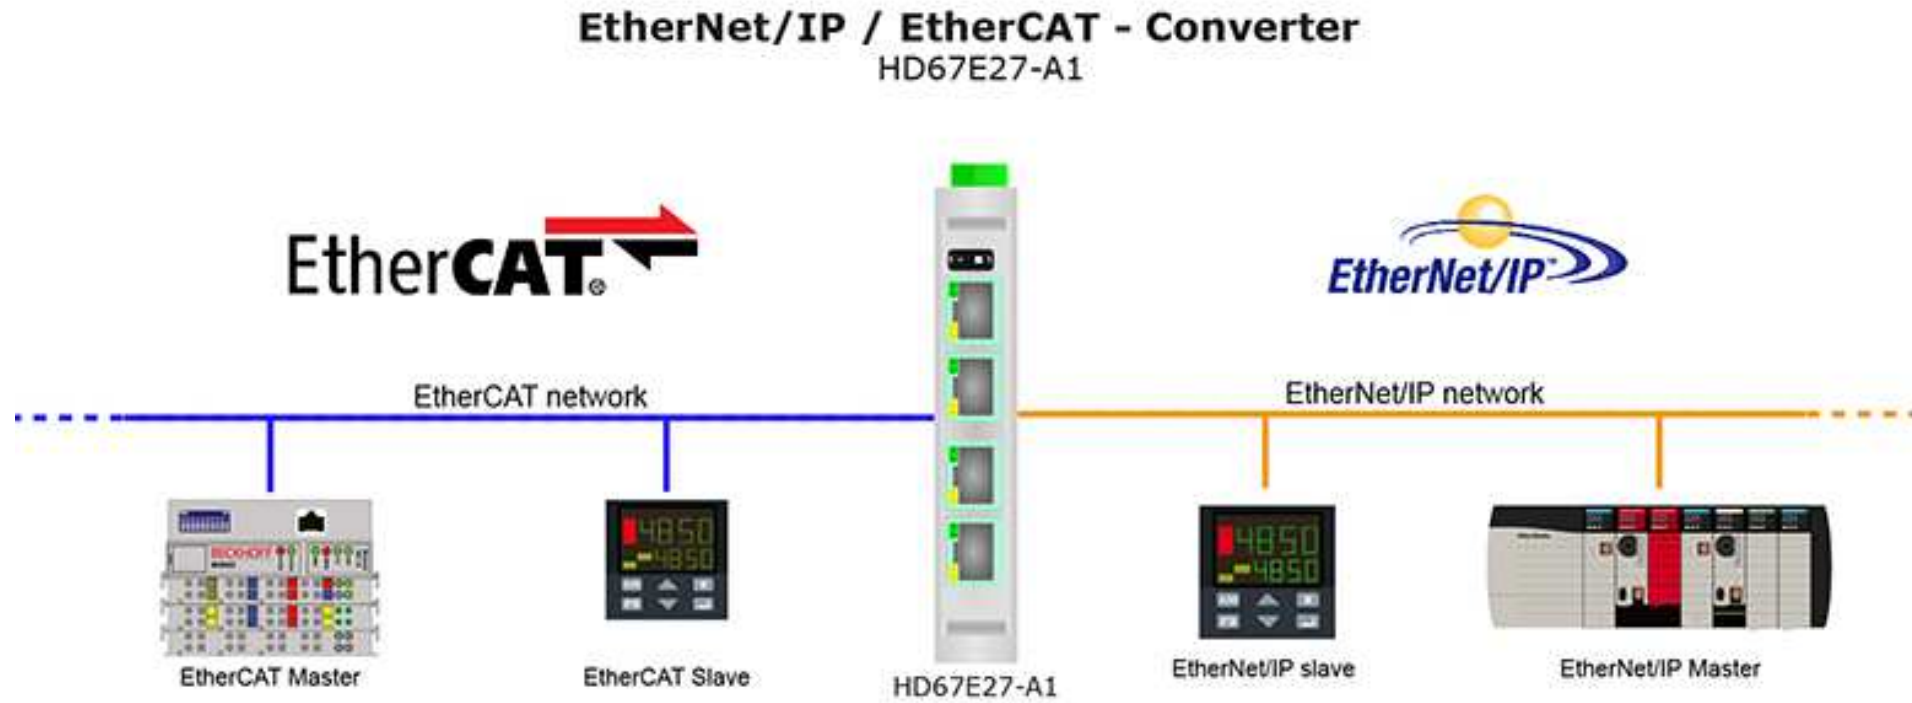

CONNECTION SCHEME:

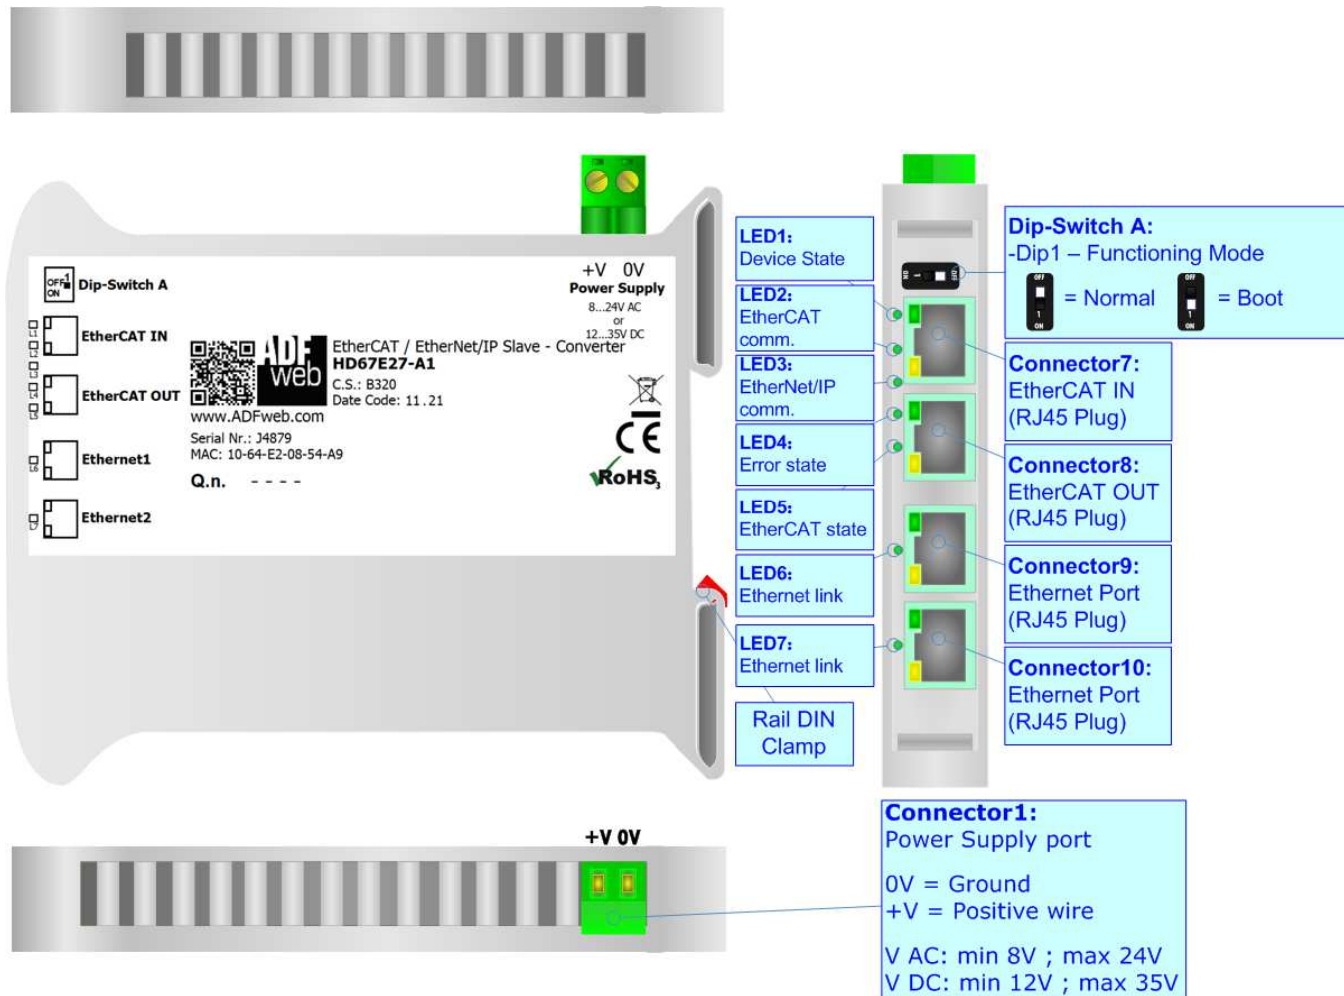


Figure 1: Connection scheme for HD67E27-A1

CHARACTERISTICS:

The HD67E27-A1 are EtherCAT / EtherNet/IP Slave - Converters.

It allows for the following characteristics:

- Isolation between EtherCAT – EtherNet/IP Slave – Power Supply;
- Two-directional information between EtherCAT bus and EtherNet/IP bus;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 8...24V AC or 12...35V DC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].

CONFIGURATION:

You need Compositor SW67E27 software on your PC in order to perform the following:

- Define the parameters of EtherCAT line;
- Define the parameters of EtherNet/IP line;
- Define EtherCAT variables to read and write;
- Export the ESI file for configuration of EtherCAT Master;
- Update the device.

POWER SUPPLY:

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.

VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V


Consumption at 24V DC:

Device	Consumption [W/VA]
HD67E27-A1	3.5

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V



Caution: Do not reverse the polarity power

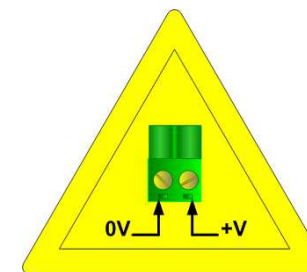

HD67E27-A1


FUNCTION MODES:

The device has got two function modes depending on the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for uploading the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.


According to the functioning mode, the LEDs will have specific functions, see 'LEDS' section.

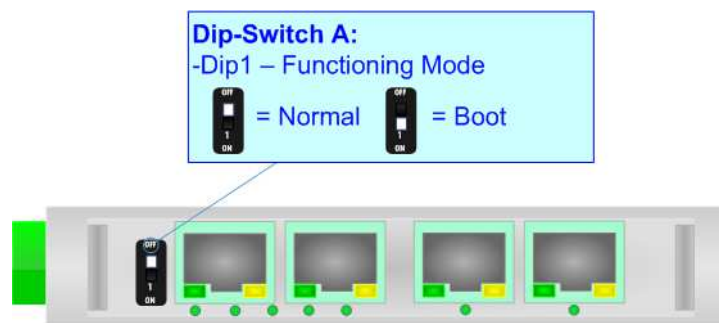

LEDS:

The device has got seven LEDs that are used to give information about the functioning status.
The various meanings of the LEDs are described in the table below.

LED	Normal Mode	Boot Mode
1: Device State (green)	Blinks slowly ($\sim 1\text{Hz}$)	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
2: EtherCAT comm. (green)	It blinks when EtherCAT communication is running	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
3: EtherNet/IP comm. (green)	It blinks when EtherNet/IP communication is running	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
4: Error state (green)	ON: An error in the communication busses occurs OFF: No errors are present	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
5: EtherCAT state (green)	OFF: EtherCAT Master not connected Blinking: EtherCAT Master is connecting ON: EtherCAT Master is connected	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
6: Ethernet1 link (green)	ON: Ethernet cable connected OFF: Ethernet cable disconnected	ON: Ethernet cable connected OFF: Ethernet cable disconnected
7: Ethernet2 link (green)	ON: Ethernet cable connected OFF: Ethernet cable disconnected	ON: Ethernet cable connected OFF: Ethernet cable disconnected

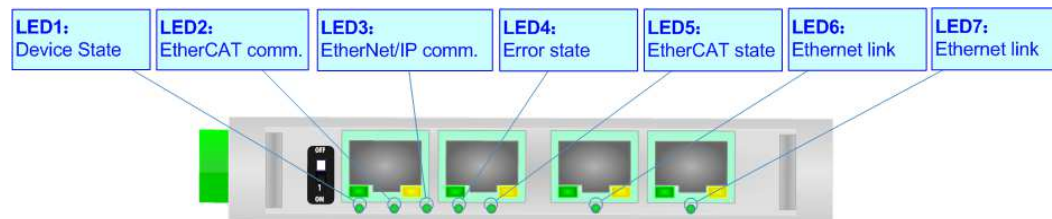


ETHERCAT

EtherCAT (Ethernet for Control Automation Technology) is an Ethernet-based fieldbus system, invented by Beckhoff Automation.


The protocol is standardized in IEC 61158 and is suitable for both hard and soft real-time computing requirements in automation technology. With EtherCAT, the standard Ethernet packet or frame (according to IEEE 802.3) is no longer received, interpreted, and copied as process data at every node. The EtherCAT slave devices read the data addressed to them while the telegram passes through the device, processing data "on the fly". In other words, real-time data and messages are prioritized over more general, less time-sensitive or heavy load data.

The converter has two EtherCAT ports, one is used as Input port (Connector7) and it will receive the incoming messages from the Master, the other is used as Output port (Connector8) and it will forward the messages to the others nodes of the network.

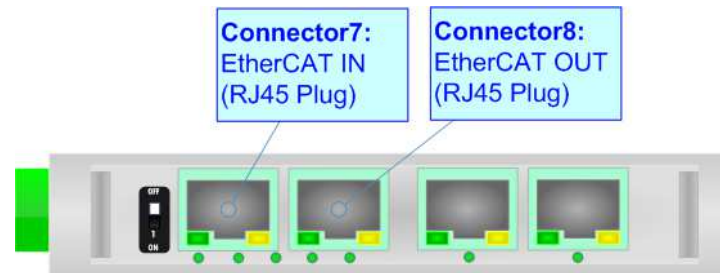

ETHERNET:

EtherNet/IP connection and the updating of the converter must be made using Connector9 and/or Connector10 of the HD67E27-A1 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

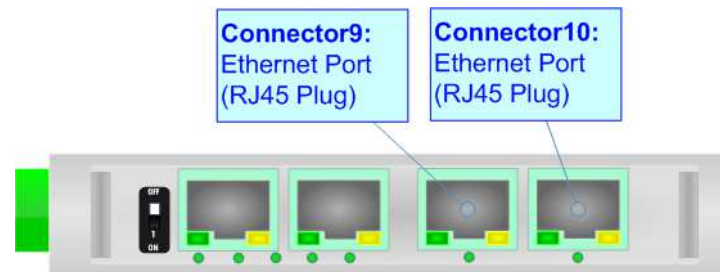

USE OF COMPOSITOR SW67E27:

To configure the Converter, use the available software that runs with Windows called SW67E27. It is downloadable on the site www.adfweb.com and its operation is described in this document. *(This manual is referenced to the last version of the software present on our web site)*. The software works with MSWindows (XP, Vista, Seven, 8, 10; 32/64bit).

When launching the SW67E27, the window below appears (Fig. 2).



Note:

It is necessary to have installed .Net Framework 4.


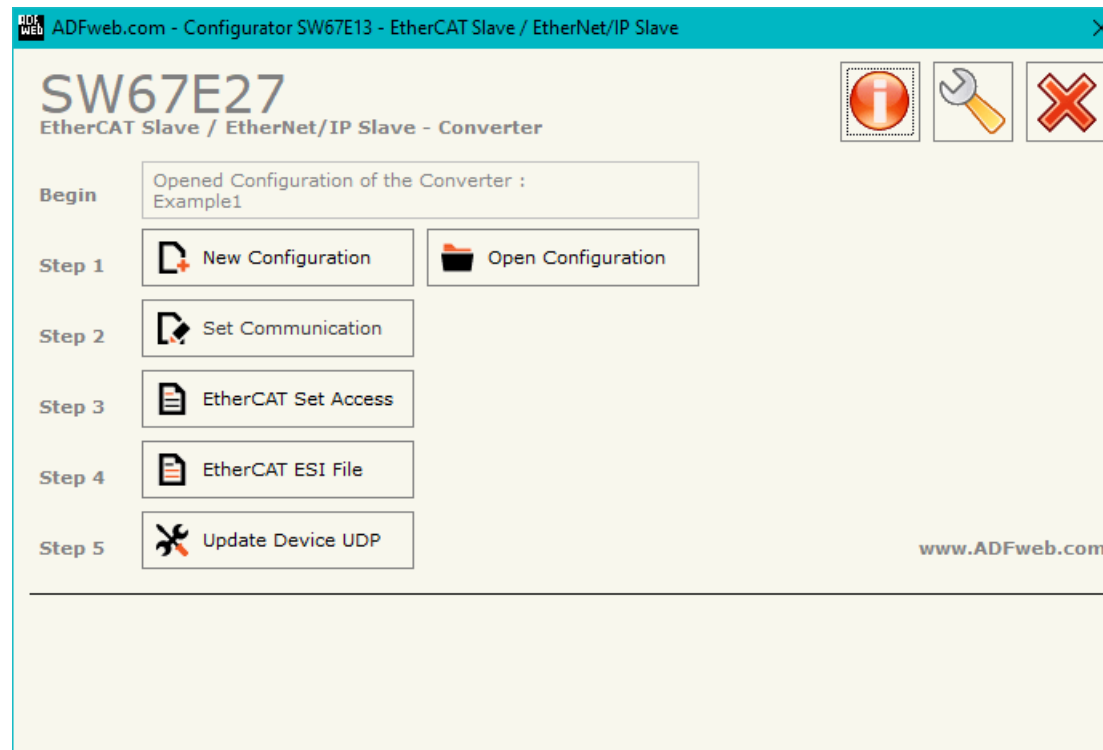


Figure 2: Main window for SW67E27


NEW CONFIGURATION / OPEN CONFIGURATION:

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

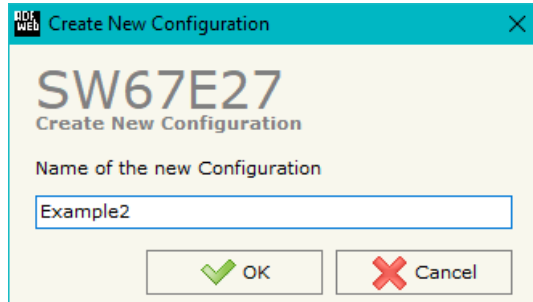

A device’s configuration can also be imported or exported:


- To clone the configurations of a programmable “EtherCAT Slave / EtherNet/IP Slave - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

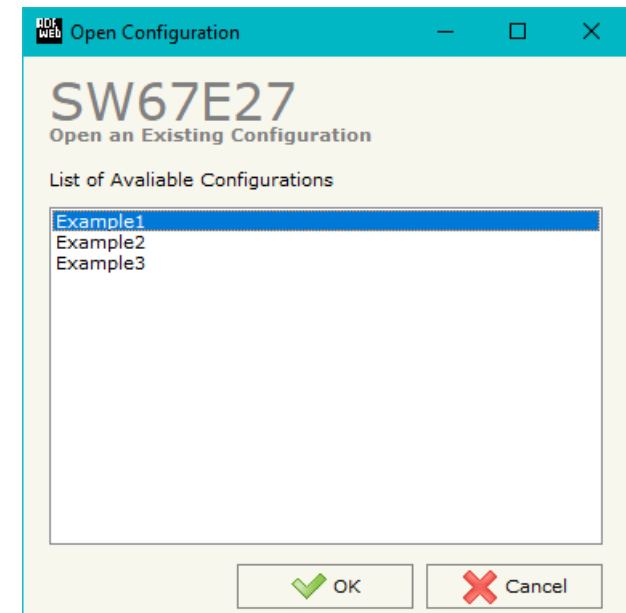


SOFTWARE OPTIONS:

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

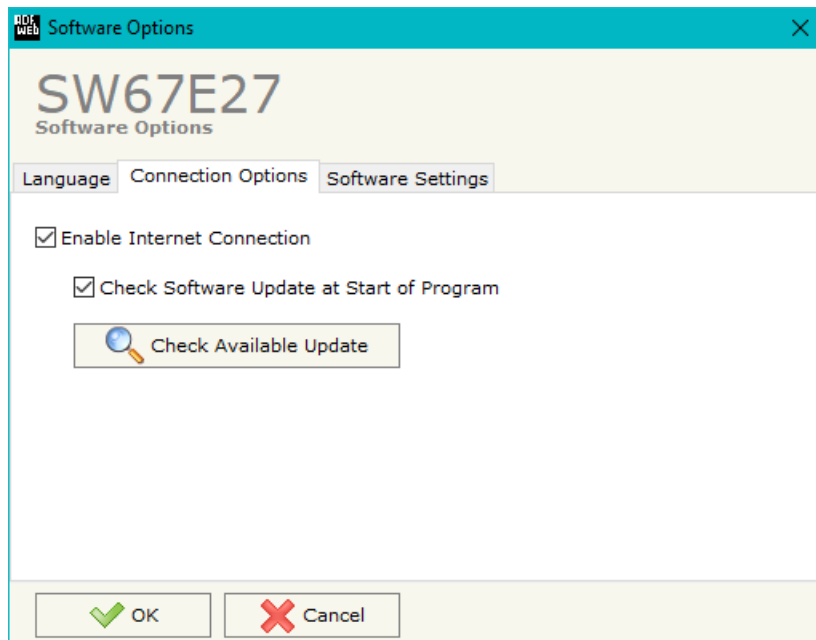

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67E27 checks automatically if there are updatings when it is launched.

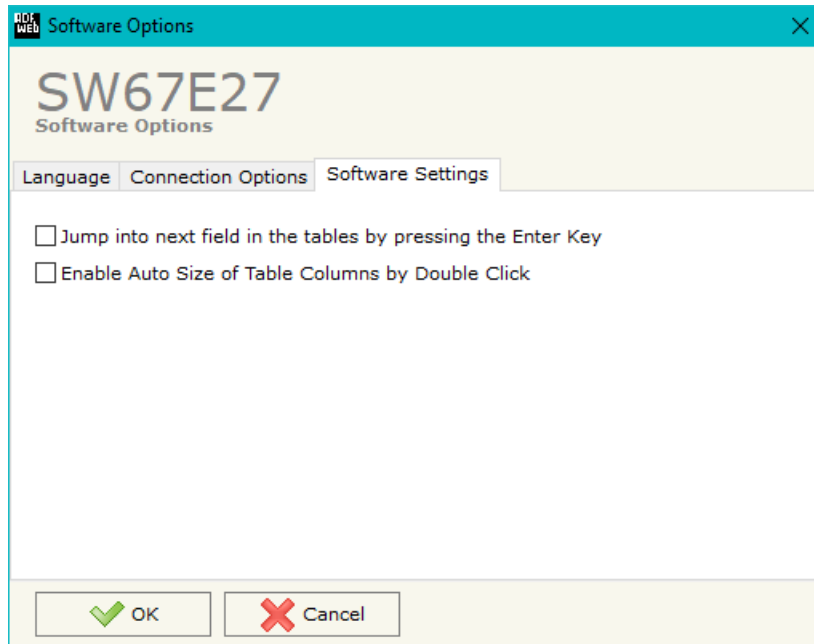

In the section "Software Settings", it is possible to enable/disable some keyboard's commands for an easier navigation inside the tables contained in the different sections of the software.

SET COMMUNICATION:

This section define the fundamental communication parameters of two buses, EtherCAT and EtherNet/IP.


By Pressing the "**Set Communication**" button from the main window for SW67E27 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The means of the fields for "EtherCAT Slave" are:

- In the field "**Revision Number**" the revision number of the converter is defined;
- In the field "**Slave Name**" the name of the converter is defined;
- In the field "**Node Address**" the ID of the converter is defined.

The means of the fields for "EtherNet/IP" are:

- In the fields "**IP Address**" the IP address for EtherNet/IP side of the converter is defined;
- In the fields "**SubNet Mask**" the SubNet Mask for EtherNet/IP side of the converter is defined;
- In the fields "**Gateway**" the default gateway of the net is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field "**Port**" the port to use for EtherNet/IP communication is defined;
- In the field "**Number Bytes Input**" the number of Input byte of the converter is defined (it is possible to use up to 496 byte);
- In the field "**Number Bytes Output**" the number of Output byte of the converter is defined (it is possible to use up to 496 byte).

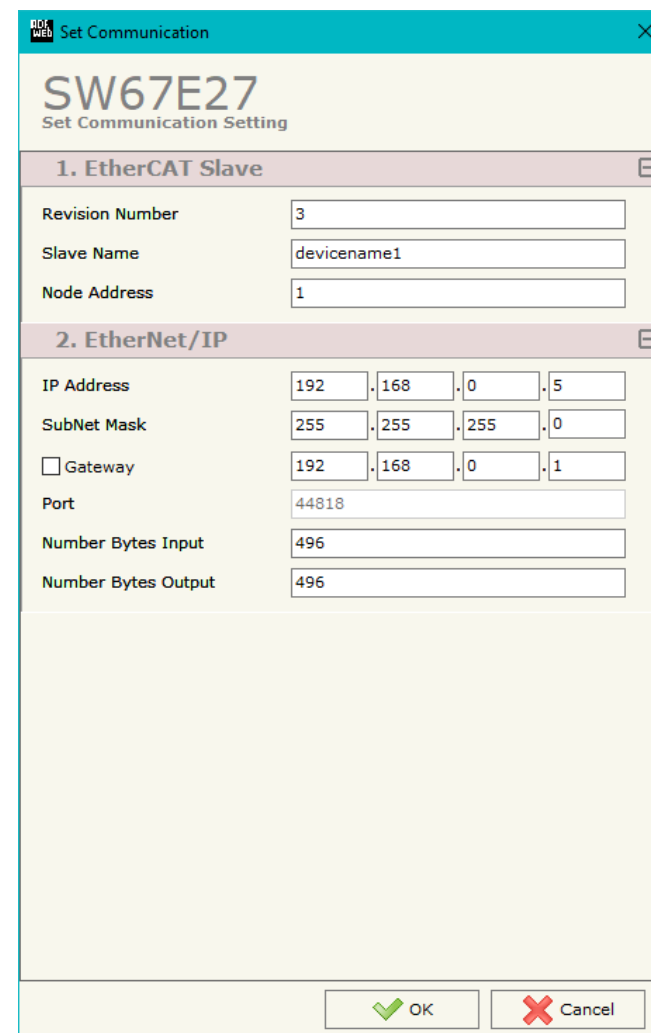

1. EtherCAT Slave	
Revision Number	3
Slave Name	devicename1
Node Address	1

2. EtherNet/IP	
IP Address	192 . 168 . 0 . 5
SubNet Mask	255 . 255 . 255 . 0
☐ Gateway	192 . 168 . 0 . 1
Port	44818
Number Bytes Input	496
Number Bytes Output	496


Figure 3: "Set Communication" window

ETHERCAT SET ACCESS:

By Pressing the “**EtherCAT Set Access**” button from the main window for SW67E27 (Fig. 2) the window “EtherCAT Slave Set Access” appears (Fig. 4).

This section is used to define the EtherCAT variables readable by the EtherCAT Master (Slave To Master) and the EtherCAT variables writeable by the EtherCAT Master (Master To Slave).

SLAVE TO MASTER

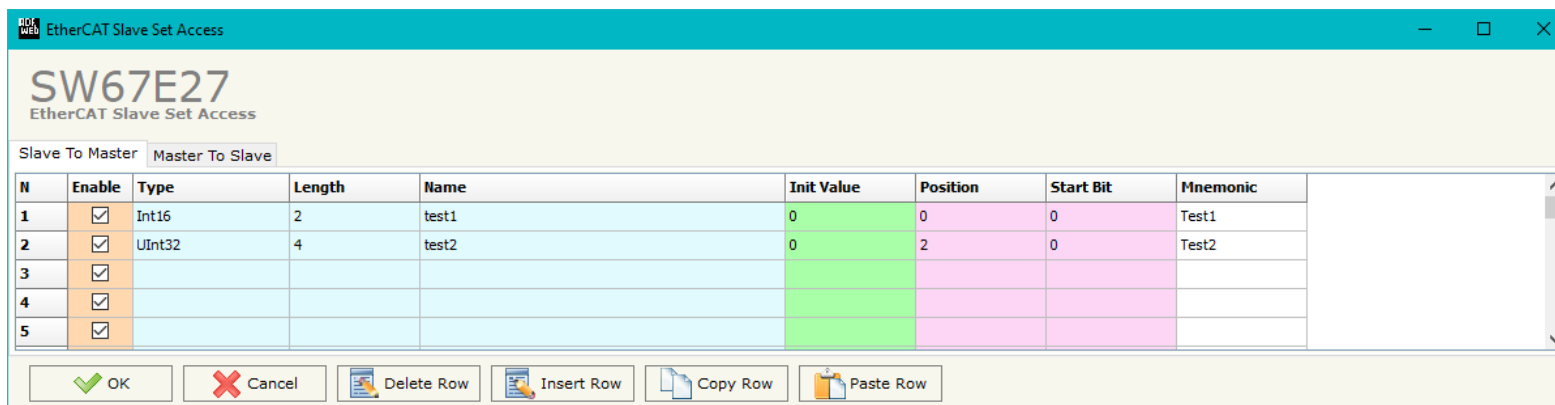


N	Enable	Type	Length	Name	Init Value	Position	Start Bit	Mnemonic
1	☒	Int16	2	test1	0	0	0	Test1
2	☒	UInt32	4	test2	0	2	0	Test2
3	☒							
4	☒							
5	☒							

Figure 4a: “EtherCAT Slave Set Access → Slave To Master” window

The means of the fields are:

- If the field “**Enable**” is checked, the EtherCAT variable is enabled;
- In the field “**Type**” the data format of the EtherCAT variable is defined;
- In the field “**Length**” the dimension of the EtherCAT variable is defined;
- In the field “**Name**” the name of the EtherCAT variable is defined;
- In the field “**Init Value**” the default value of the EtherCAT variable is defined;
- In the field “**Position**” the starting address of the EtherCAT array where the variable is mapped is defined;
- In the field “**Start Bit**” the starting bit of the selected Position where the variable is mapped is defined;
- In the field “**Mnemonic**” a description of the variable is defined.

MASTER TO SLAVE

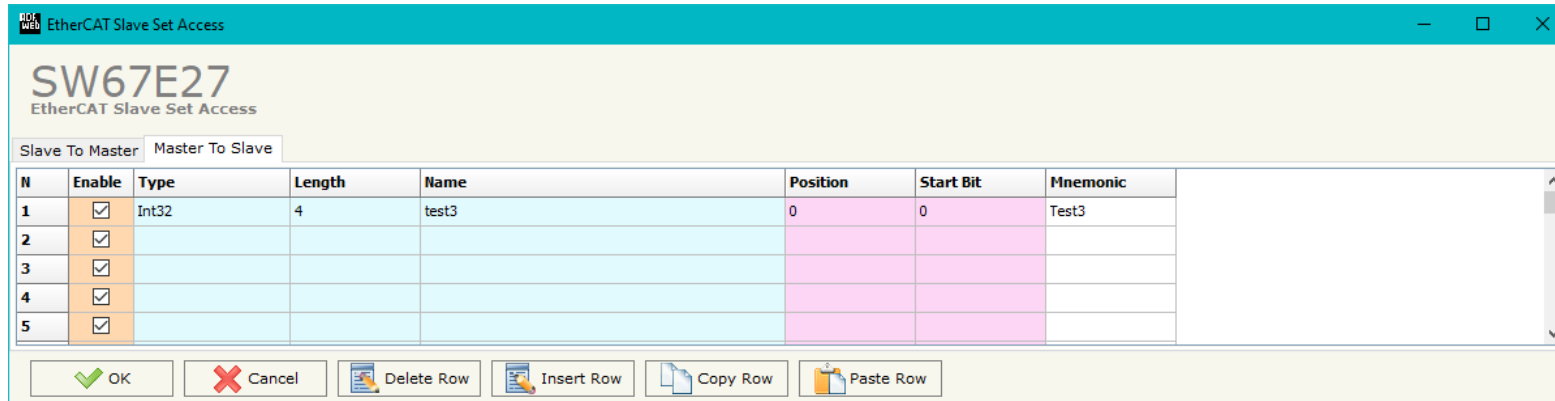

N	Enable	Type	Length	Name	Position	Start Bit	Mnemonic
1	☒	Int32	4	test3	0	0	Test3
2	☒						
3	☒						
4	☒						
5	☒						

Figure 4b: "EtherCAT Slave Set Access → Master To Slave" window

The means of the fields are:

- If the field "**Enable**" is checked, the EtherCAT variable is enabled;
- In the field "**Type**" the data format of the EtherCAT variable is defined;
- In the field "**Length**" the dimension of the EtherCAT variable is defined;
- In the field "**Name**" the name of the EtherCAT variable is defined;
- In the field "**Position**" the starting address of the EtherCAT array where the variable is mapped is defined;
- In the field "**Start Bit**" the starting bit of the selected Position where the variable is mapped is defined;
- In the field "**Mnemonic**" a description of the variable is defined.

ETHERCAT ESI FILE:

By pressing the "**EtherCAT ESI File**" button it is possible to save the ESI file for the EtherCAT side of the converter. The ESI file is used to configure the EtherCAT Master.

UPDATE DEVICE:

By pressing the **"Update Device"** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary. This by using the Ethernet port.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP **"192.168.2.205"**;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn ON the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.

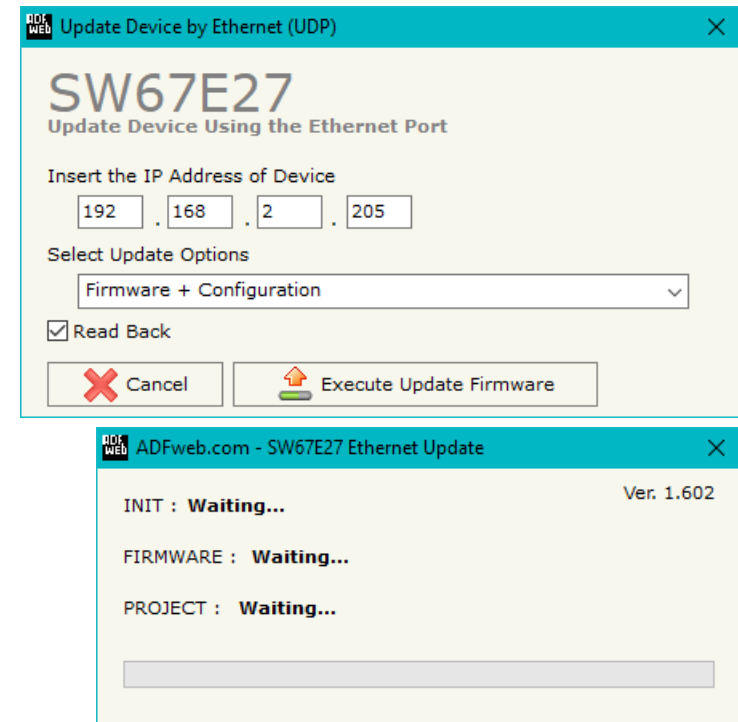


Figure 5: "Update device" windows


Note:

When you receive the device, for the first time, you also have to update the Firmware in the HD67E27 device.


Warning:

If Fig. 6 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8 or 10 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp -d". Pay attention that with Windows Vista, Seven, 8, 10 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

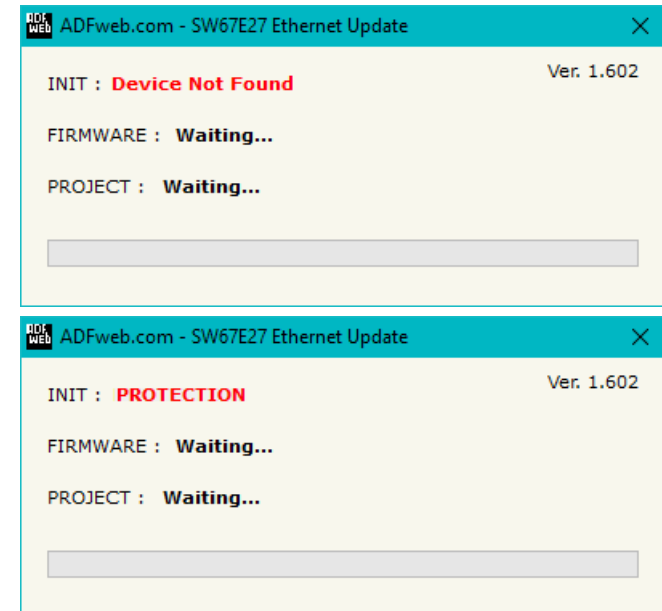


Figure 6: "Error" window


Warning:


In the case of HD67E27 you have to use the software "HD67E27": www.adfweb.com/download/filefold/SW67E27.zip.


PLC CONFIGURATION:

The configuration and commissioning of the EtherNet/IP Converter as described on the following pages was accomplished with the help of the "RSLogix 5000" software of Rockwell Automation. In case of using a control system from another supplier please attend to the associated documentation.

These are the steps to follow:

- 1) Create a "Generic Ethernet Module" under the Ethernet section in the I/O Configuration tree.

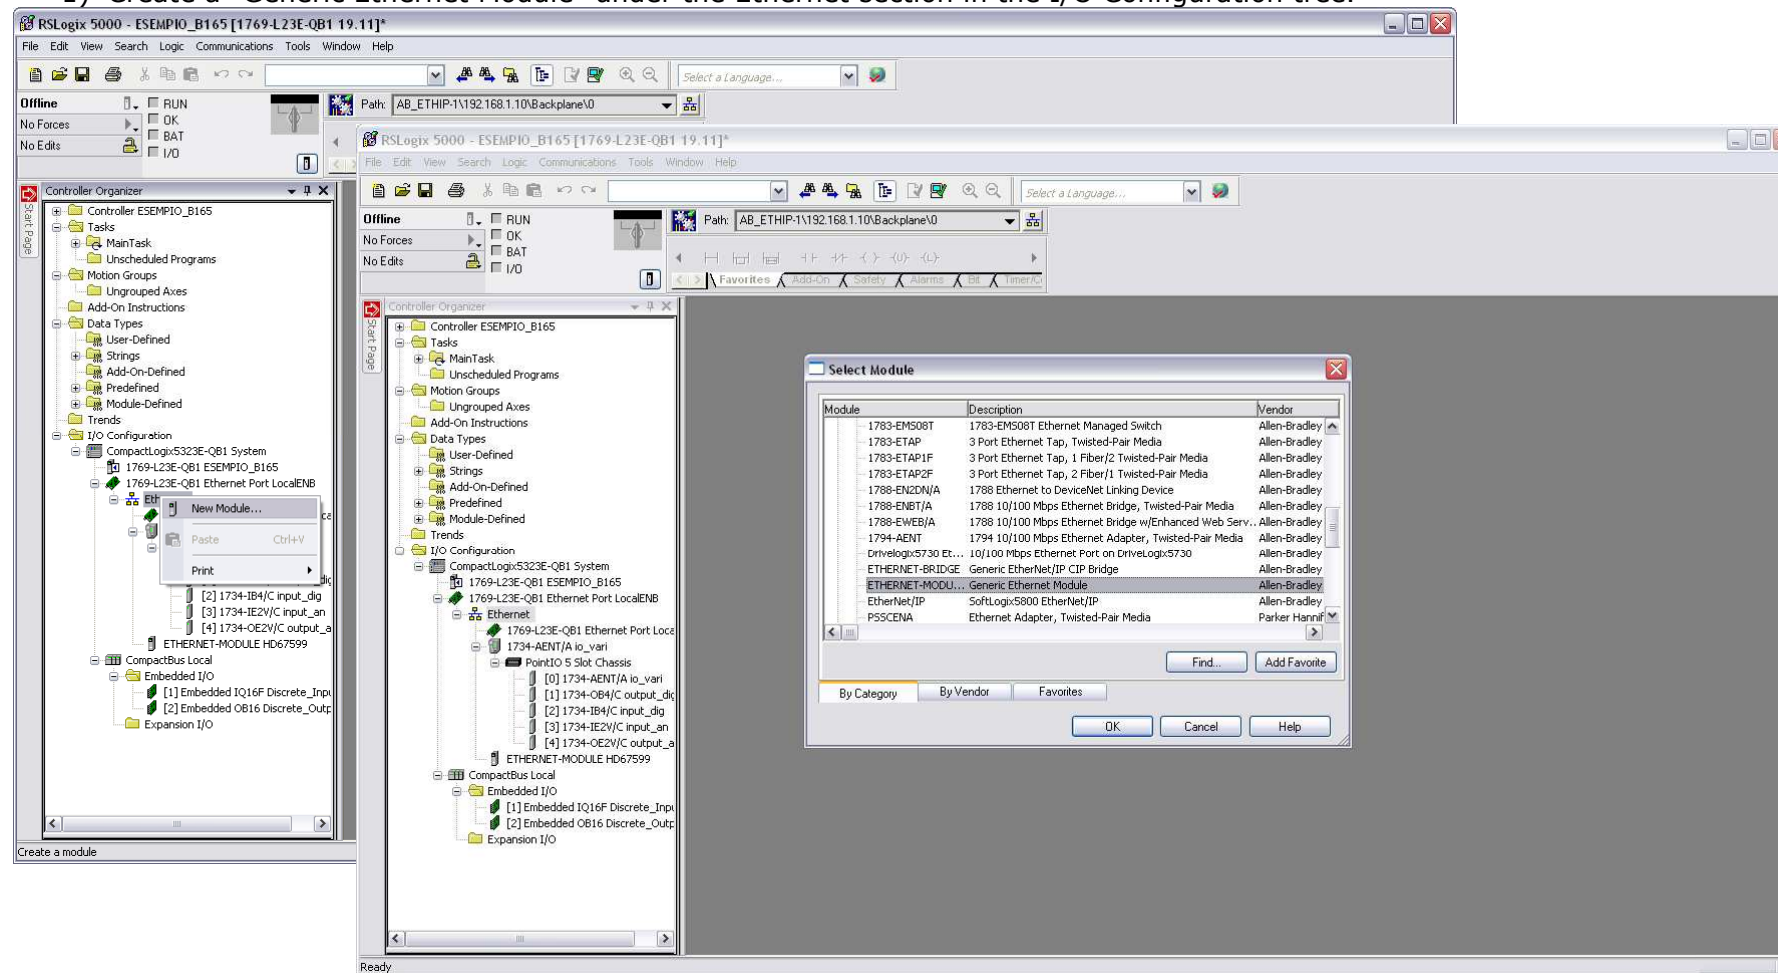

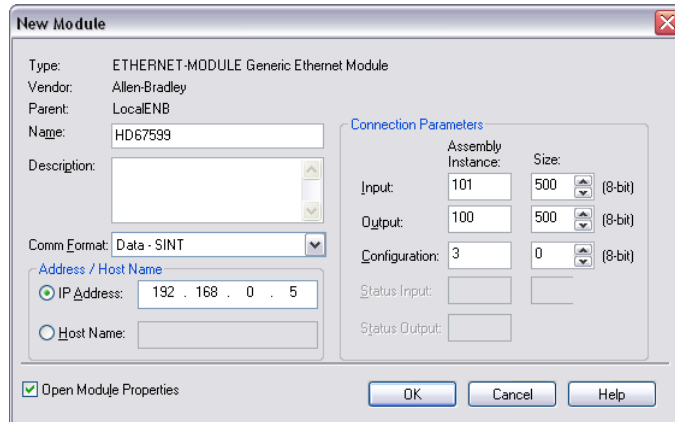

2) Edit the settings of the new Generic Ethernet Module. As shown in the screen shot below, the module was named "HD67E27" and the IP-address assigned is 192.168.0.5.

For the Comm Format "Data – SINT" shall be selected as the data type.

The HD67E27 can use up to 500 bytes for input assembly instance 101 and 500 bytes for output assembly instance 100.


RSLogix 5000 requires a configuration assembly instance. Both modules do not provide a configuration assembly instance. Therefore it is allowed to select an instance of 3 and to set the value to zero.

3) The setting of 10msec for the "Requested Packet Interval (RPI)" is adequate but it is possible to change this value as required. A lower value of 2ms shall not be selected.



Warning:


The field "Use Unicast Connection over EtherNet/IP" must be checked.

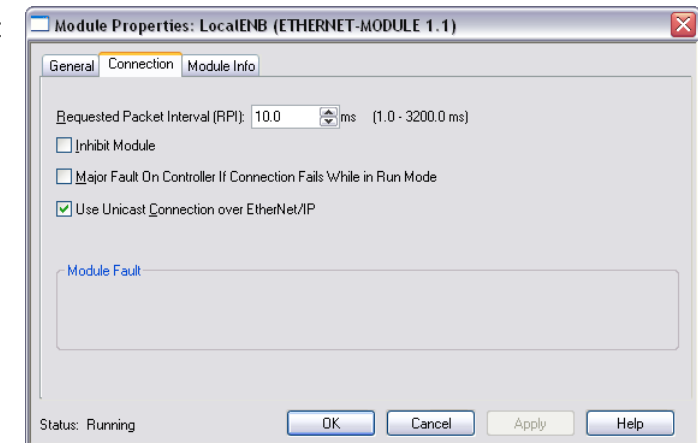



4) After the configuration is completed, the controller tags are created.

The screenshot displays the RSLogix 5000 software interface. The top menu bar includes File, Edit, View, Search, Logic, Communications, Tools, Window, and Help. Below the menu is a toolbar with various icons for file operations and a 'Select a Language...' dropdown. The main workspace is divided into three panes:

- Left Pane (Controller Organizer):** Shows a hierarchical tree structure of the project. The 'Controller ESEMPIO_B165' is selected, and its 'Controller Tags' folder is expanded, showing a list of tags including 'MainTask', 'MainProgram', 'Unscheduled Programs', 'Motion Groups', 'Ungrouped Axes', 'Add-On Instructions', 'Data Types', 'User-Defined', 'Strings', 'Add-On-Defined', 'Predefined', 'Module-Defined', 'Trends', 'I/O Configuration', 'CompactLogix5323E-QB1 System', '1769-L23E-QB1 ESEMPIO_B165', '1769-L23E-QB1 Ethernet Port LocalENB', 'Ethernet', '1769-L23E-QB1 Ethernet Port LocalENB', '1734-AENT/A io_vari', 'PointIO 5 Slot Chassis', '[0] 1734-AENT/A io_vari', '[1] 1734-QB4/C output_dig', '[2] 1734-IB4/C input_dig', '[3] 1734-IE2V/C input_an', '[4] 1734-OE2V/C output_b', 'ETHERNET-MODULE HD67599', 'CompactBus Local', 'Embedded I/O', '[1] Embedded IQ16F Discrete_Inp', '[2] Embedded OB16 Discrete_Outp', and 'Expansion I/O'.
- Top Center Pane:** Displays the 'Scope: ESEMPIO_B165' and 'Shgw: All Tags'. It shows a table of tags with columns: Name, Value, Force Mask, Style, Data Type, Description, and Constant. The table lists 20 tags, all with a value of 0 and a data type of SINT.
- Bottom Center Pane:** Displays the 'Monitor Tags' table, which is currently empty.

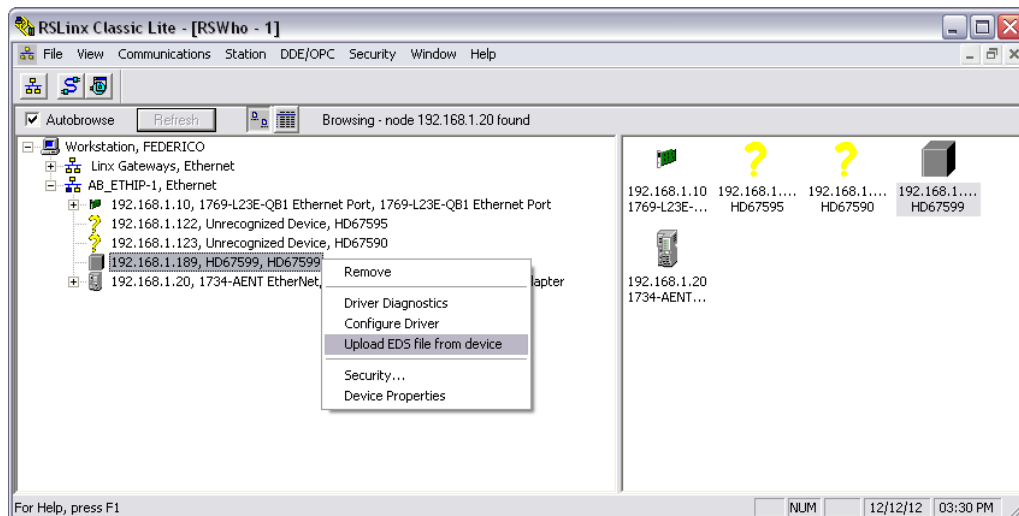

5) With "RSLinx Classic Lite", after have done a network scan (RSWho), and finding the EtherNet/IP device, it is possible to load the EDS file for the device in order to have the "Module Info" compiled.

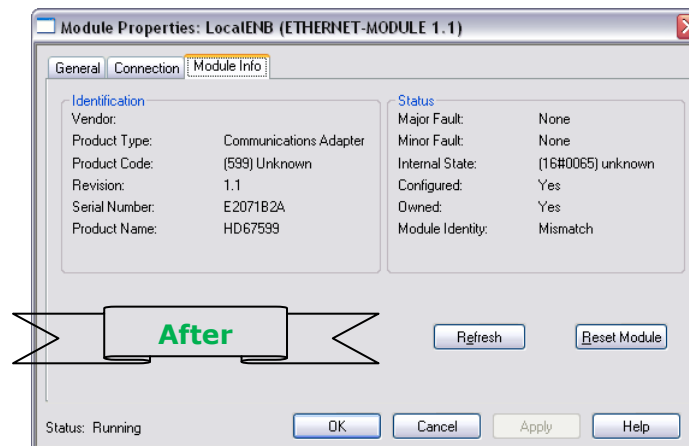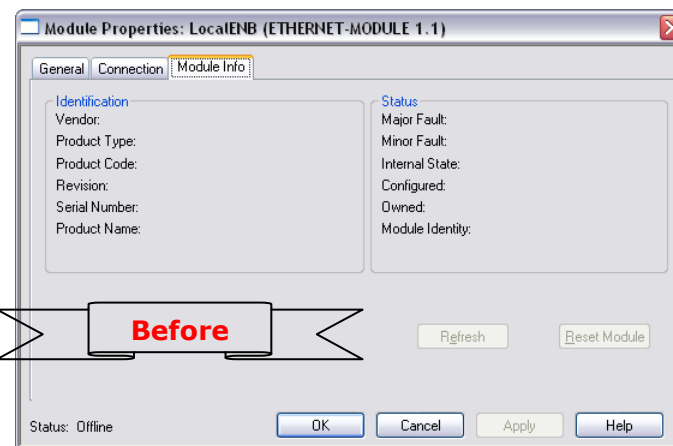

MECHANICAL DIMENSIONS:


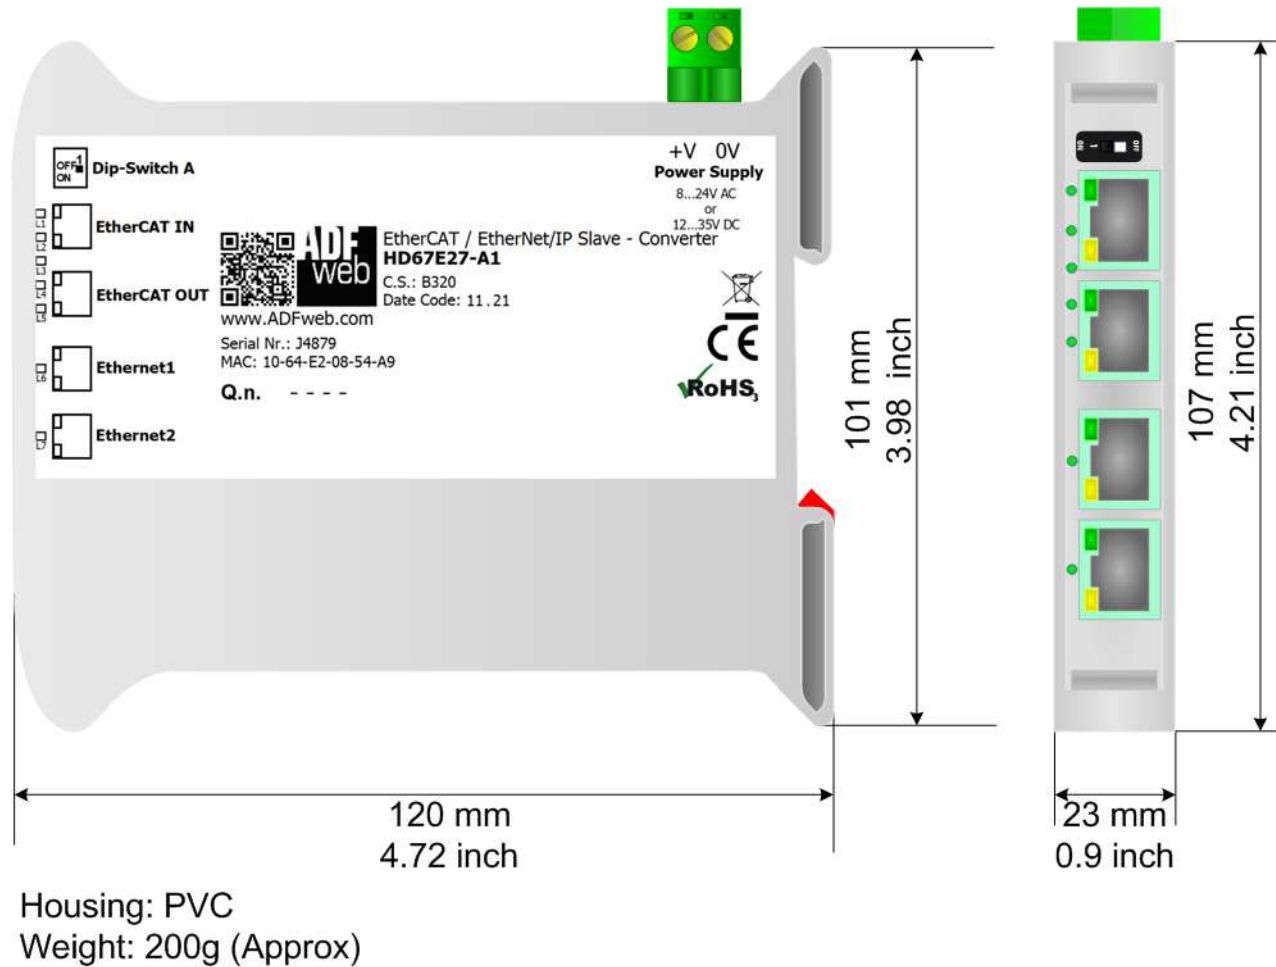


Figure 7: Mechanical dimensions scheme for HD67E27-A1

ORDERING INFORMATION:

The ordering part number is formed by a valid combination of the following:

HD67E27 - xx

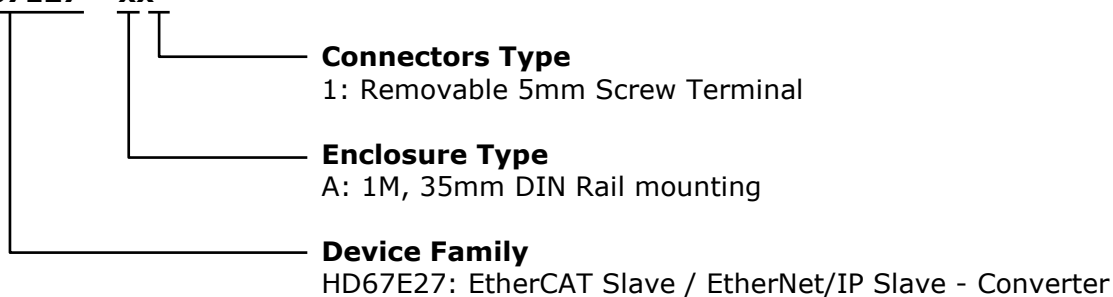

Order Code: **HD67E27-A1** - EtherCAT Slave / EtherNet/IP Slave – Converter

ACCESSORIES:

Order Code: **AC34011** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V DC

Order Code: **AC34012** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 24 V DC

DISCLAIMER:

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

OTHER REGULATIONS AND STANDARDS:

WEEE INFORMATION



Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE



The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

CE MARKING



The product conforms with the essential requirements of the applicable EC directives.

WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at <https://www.wachendorff-prozesstechnik.de/tbs/>. Otherwise contact us at the address support@wachendorff.de

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at <https://www.wachendorff-prozesstechnik.de/garantie-und-reparatur/>. Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.

Manufacturer:



ADFweb.com S.r.l.
Strada Nuova, 17
IT-31010
Mareno di Piave
Italy
www.ADFweb.com

Distributor for Germany:

Wachendorff Prozesstechnik GmbH & Co.KG



Industriestraße 7
65366 Geisenheim, GERMANY
Phone +49 6722 996520
Email: wp@wachendorff.de
www.wachendorff-prozesstechnik.de

